



Installationsanleitung ODF Breakout
Installation guide ODF Breakout
Instructions de montage ODF Breakout

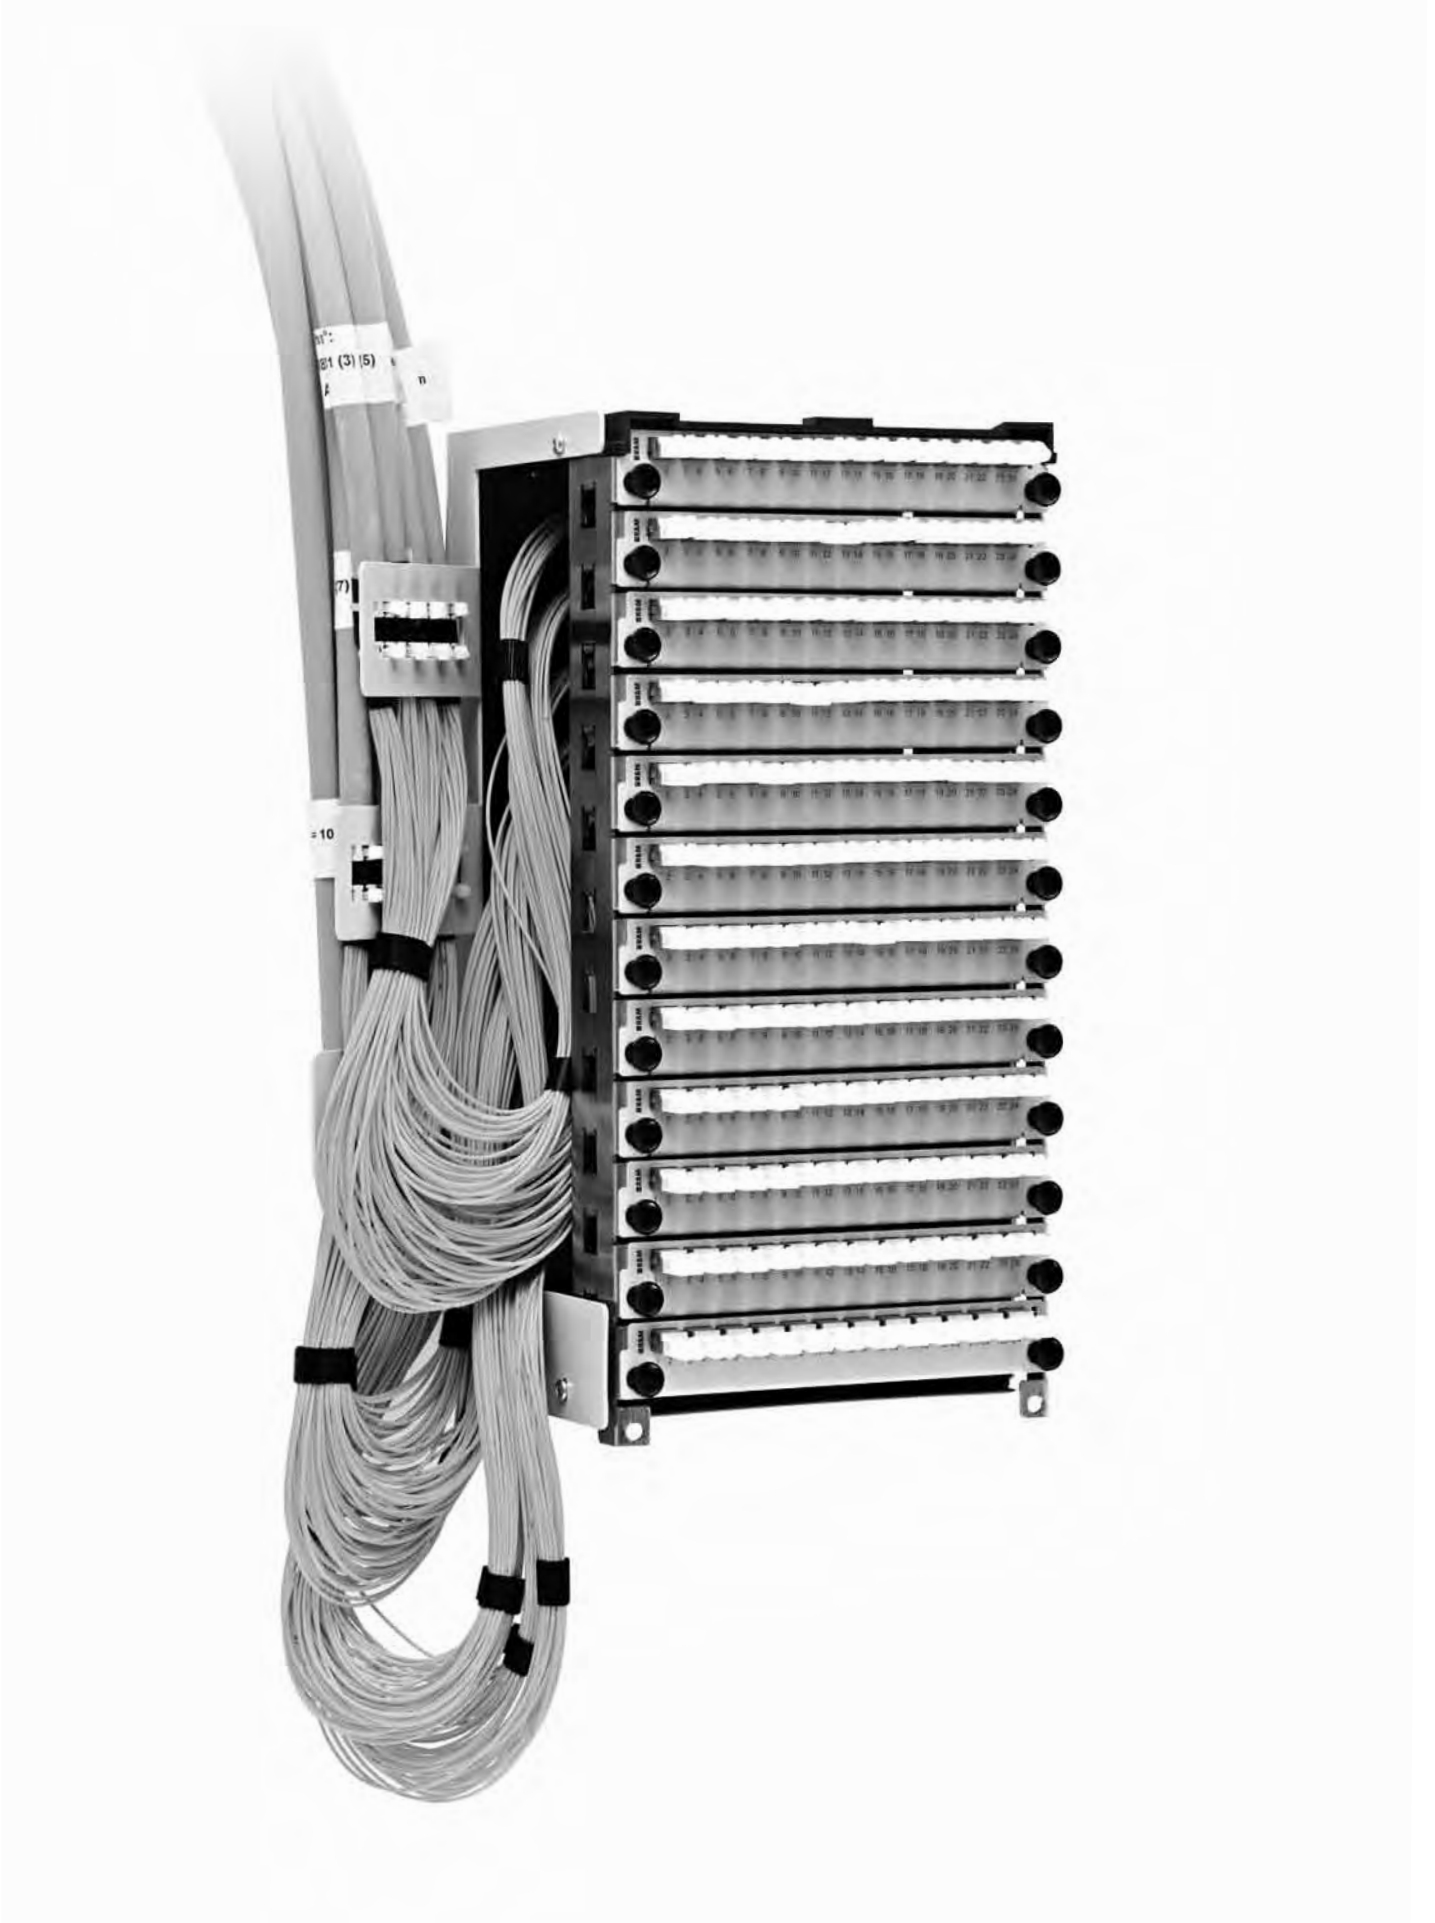


A1

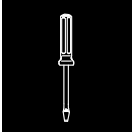

023.0292

A2

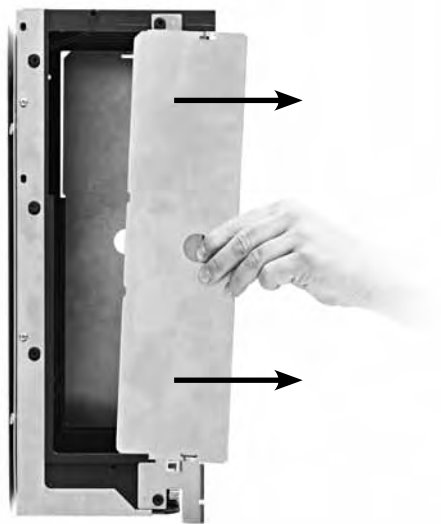


023.0331

A3




023.0332

A4

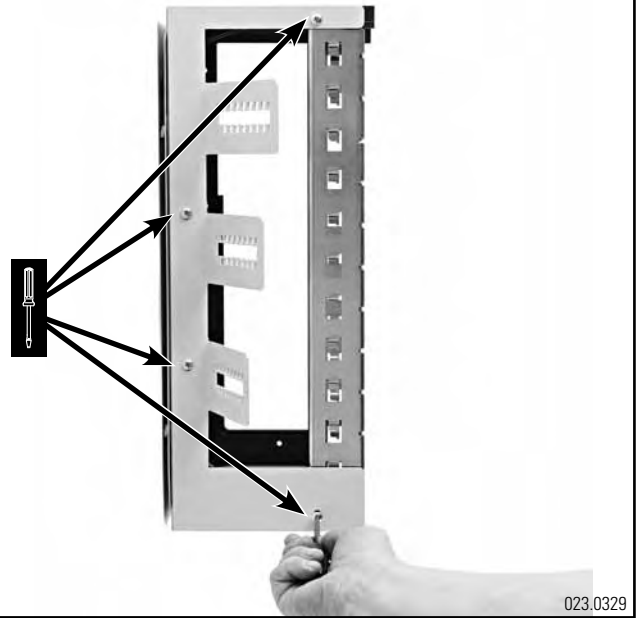

023.0329

A5




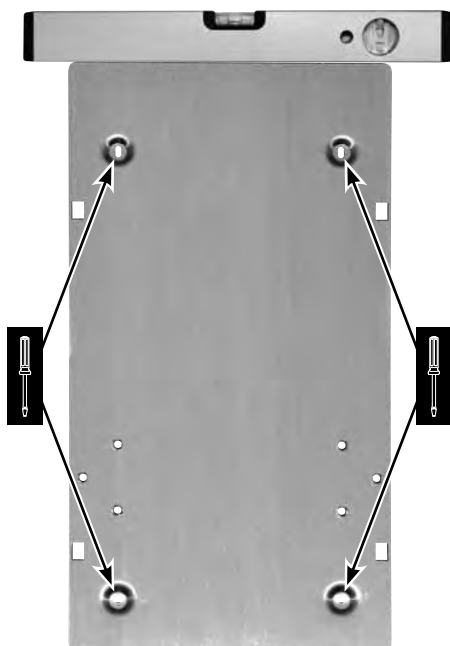








021.2528 / 021.2529

A6



023.0325

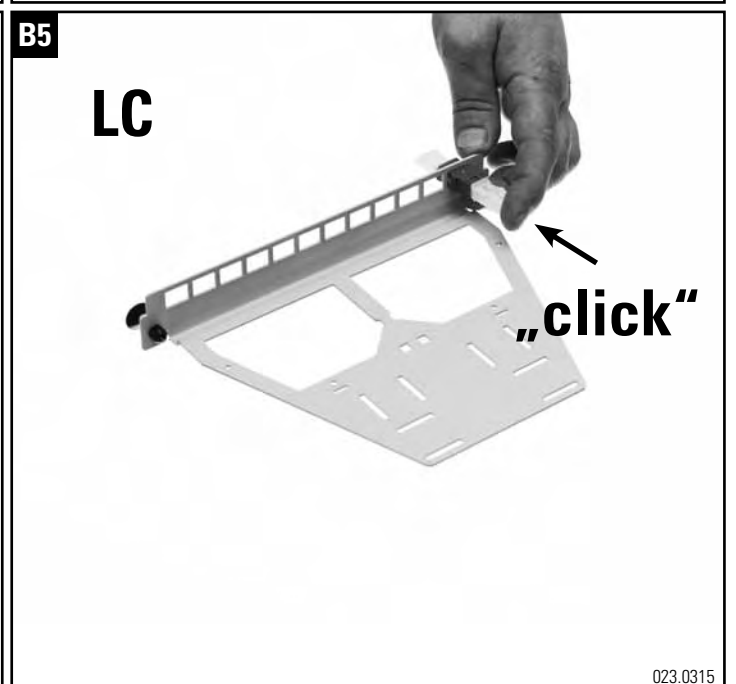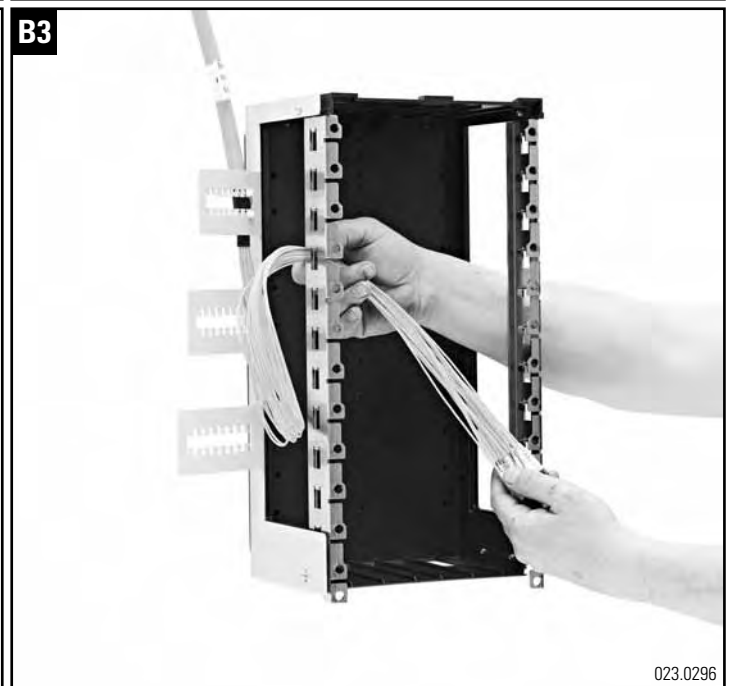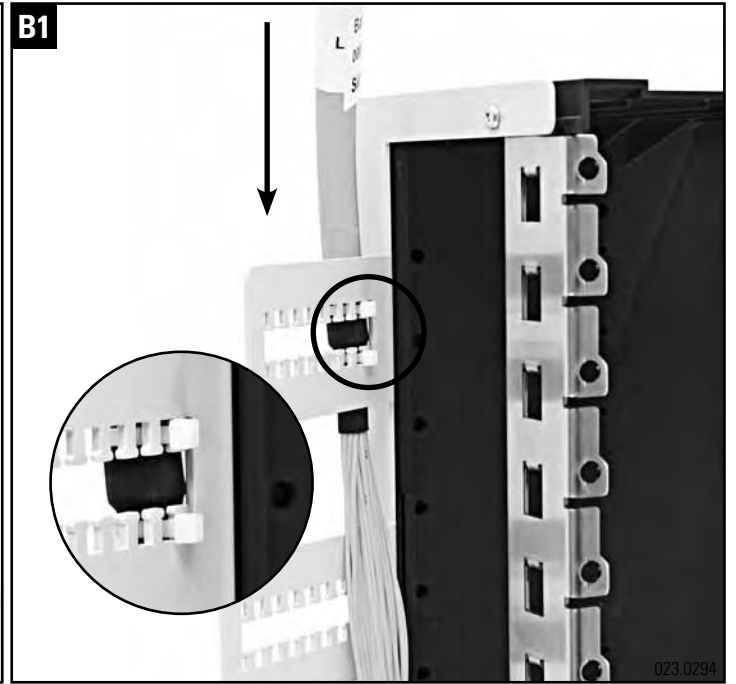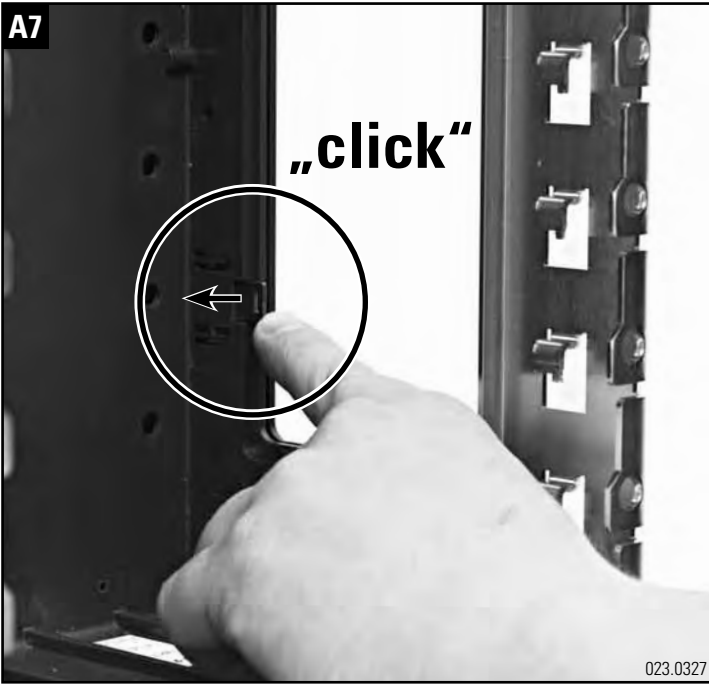

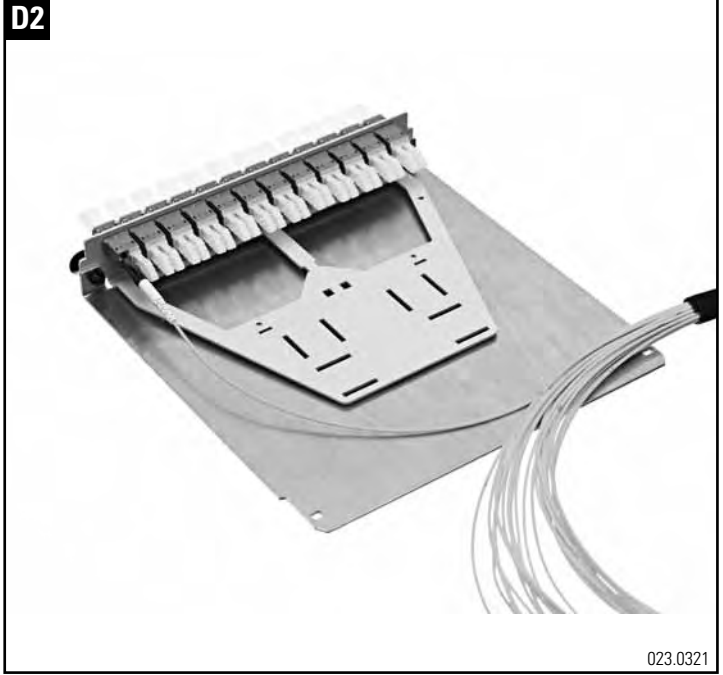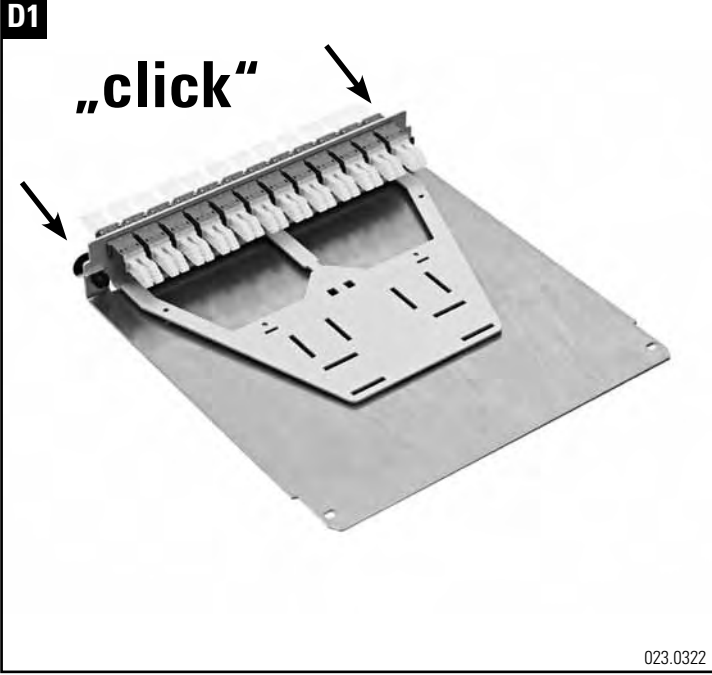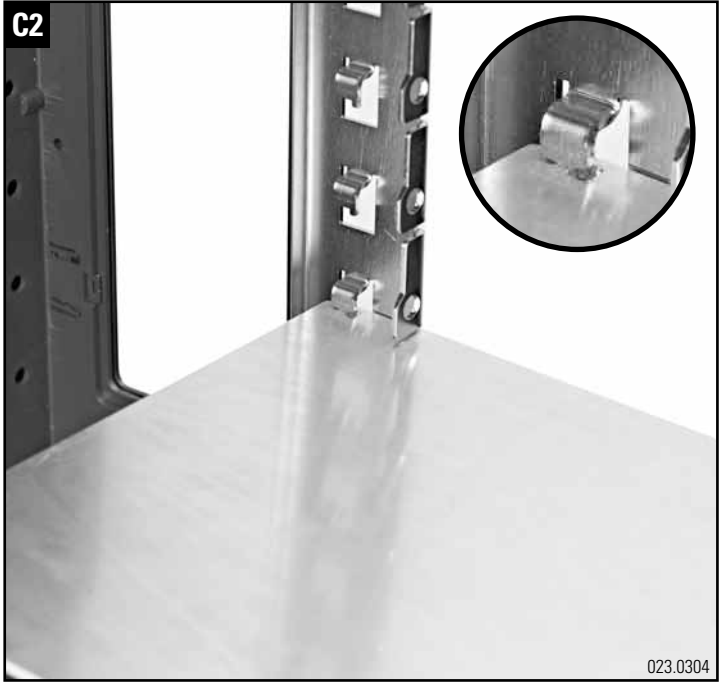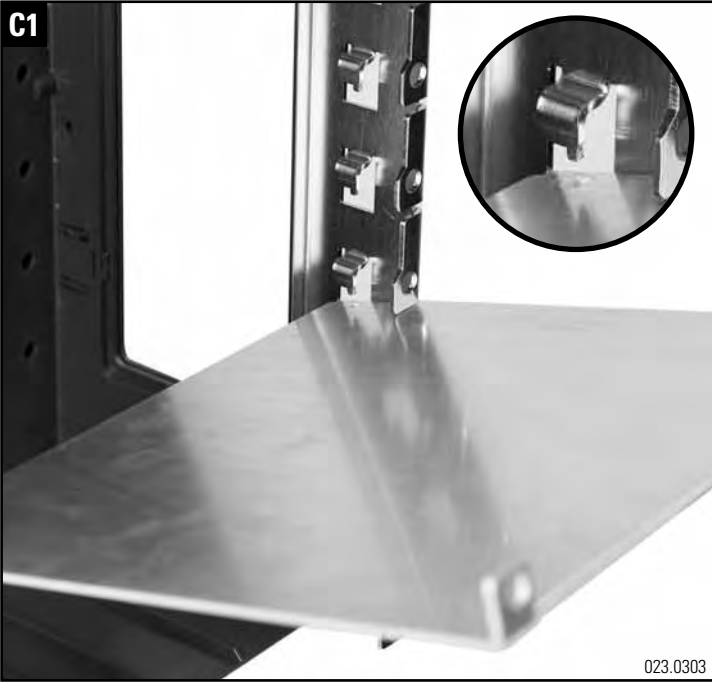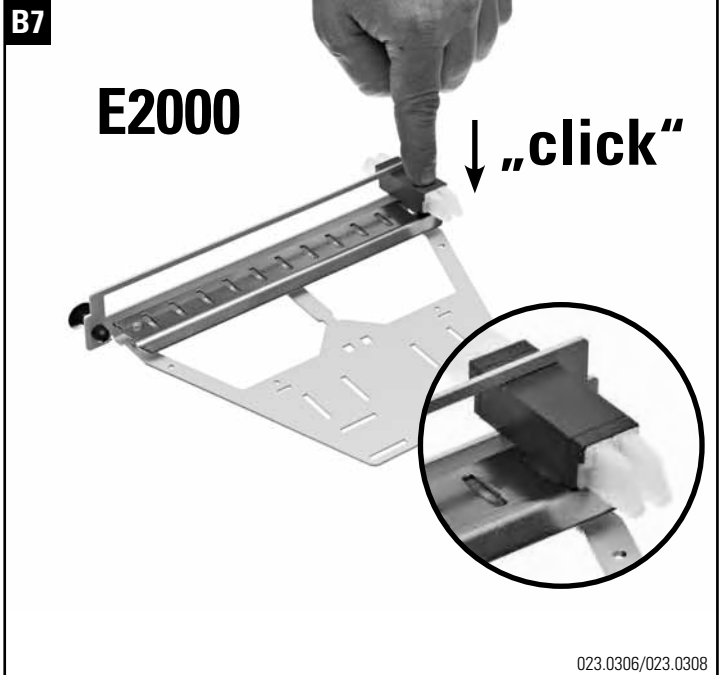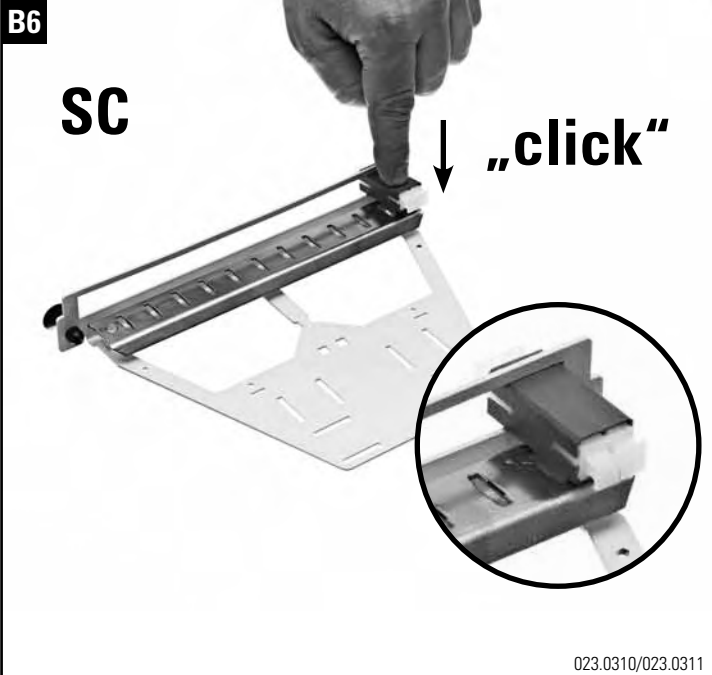

D3




023.0321

D4




023.0320

D5

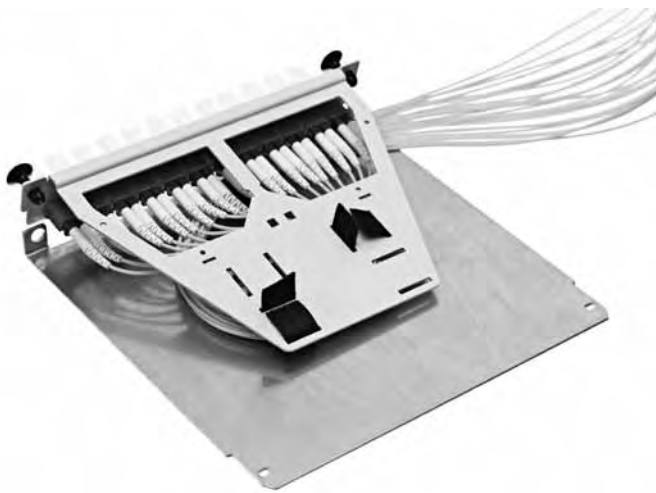


023.0319

D6

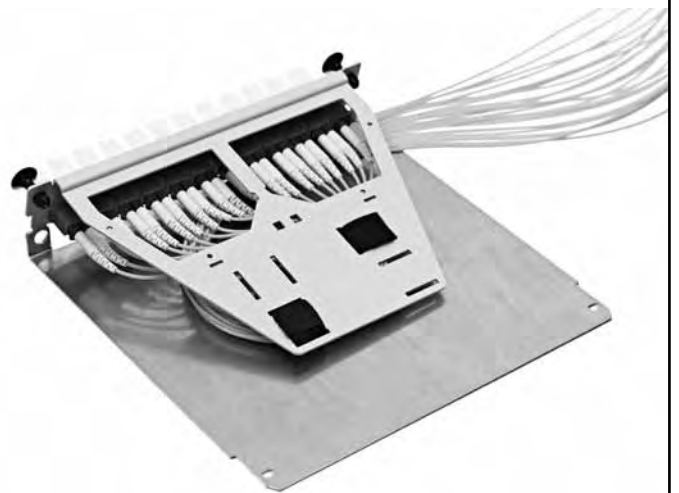

023.0318

D7






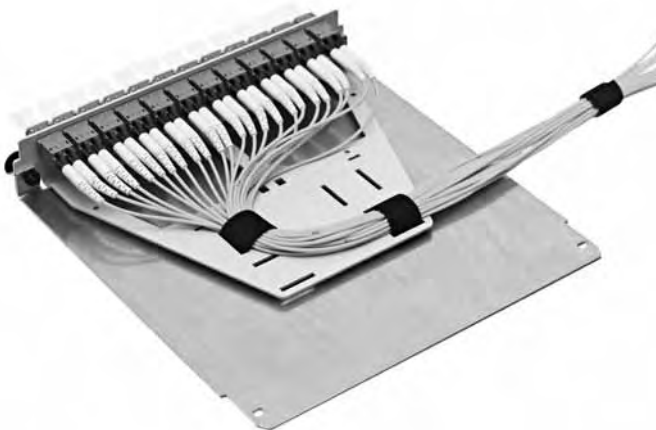



023.0317

E1



023.0290

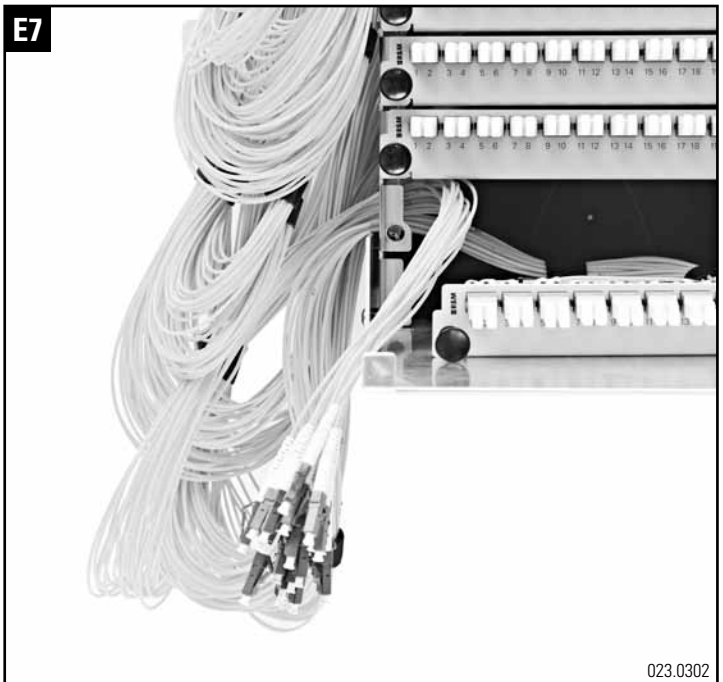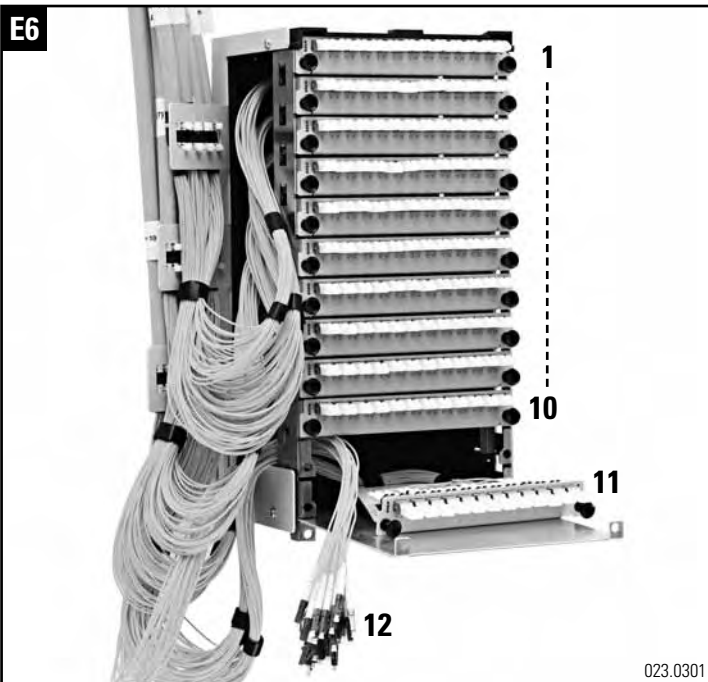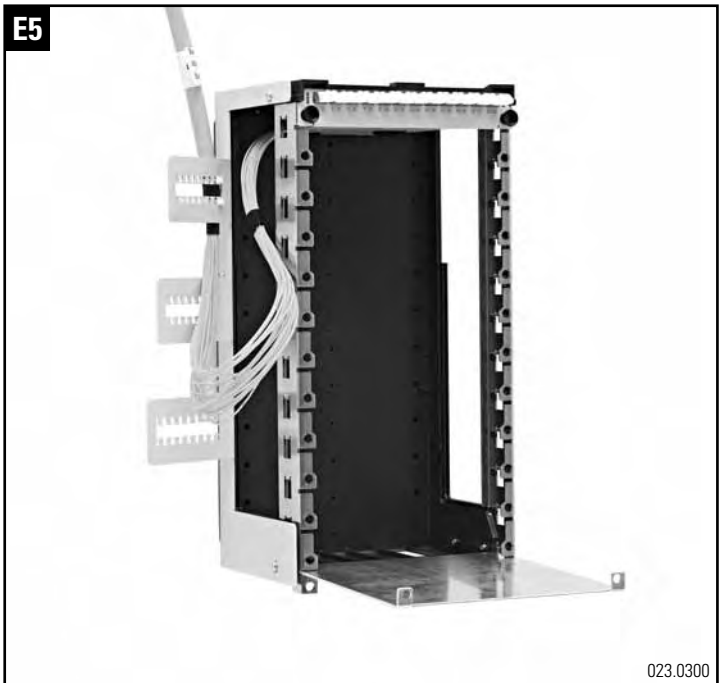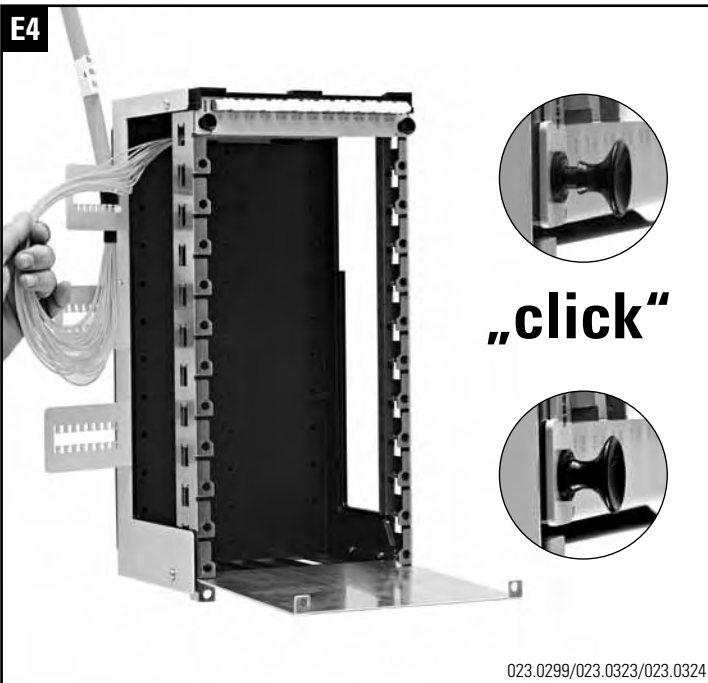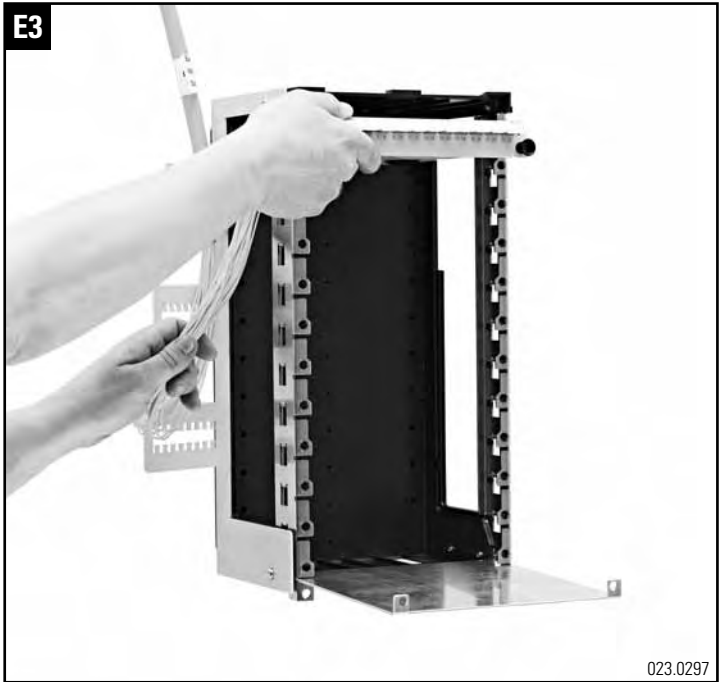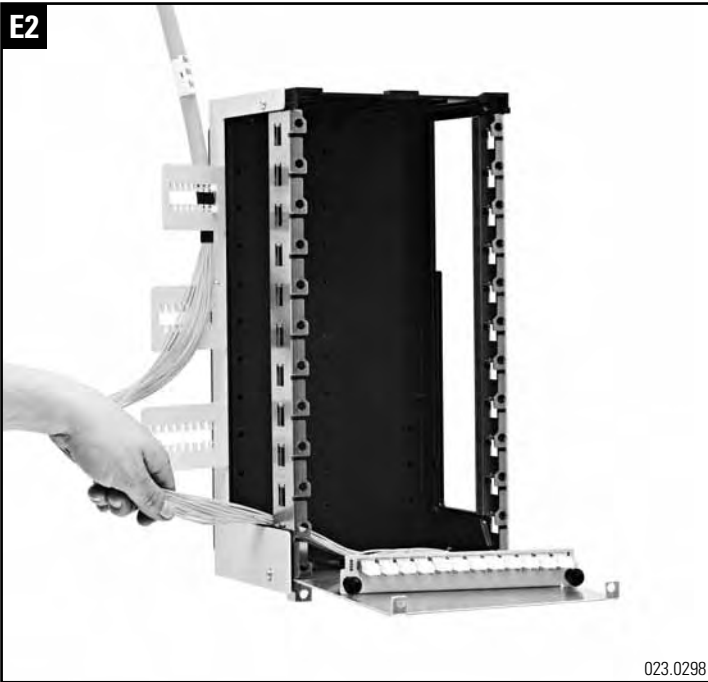

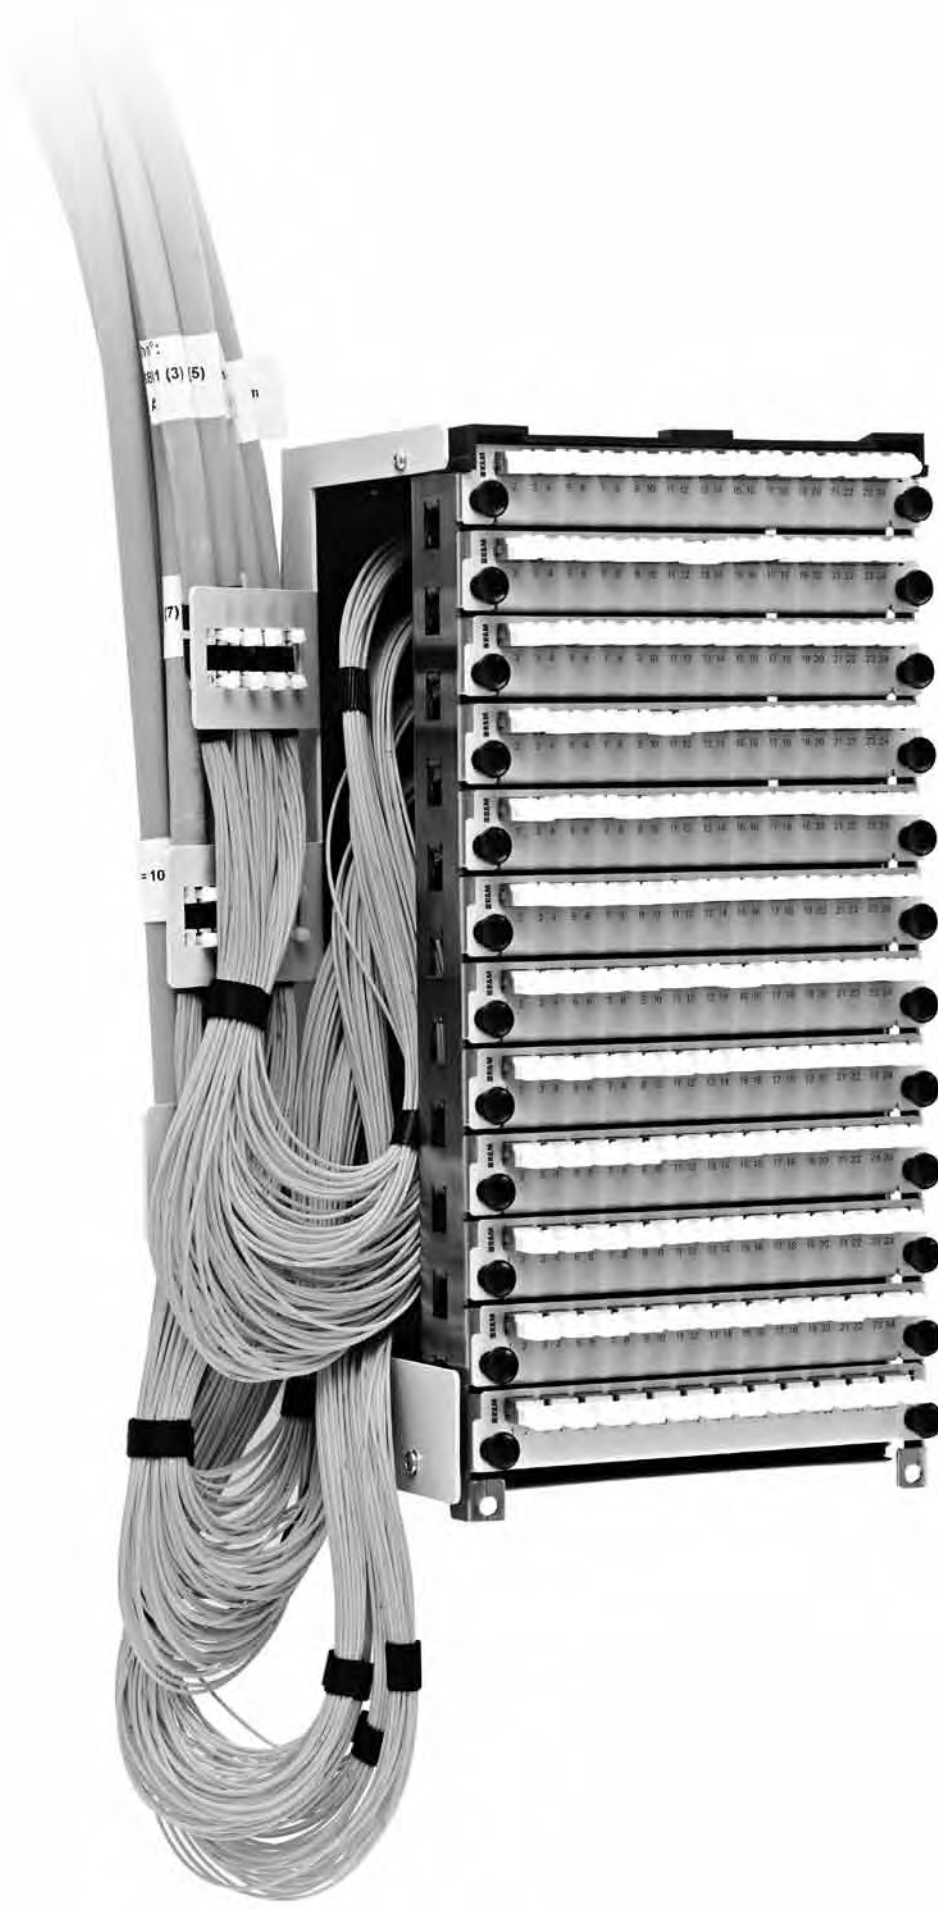

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

